

UAS GEOZONE ENTRY REQUIREMENTS FOR EBR-62

GEOZONE MANAGEMENT (to apply for flight authorization)	
Sint-Truiden AD Commander	ebst.geozonemanager@droneport.eu
Sint-Truiden AD Commander	+32 (0) 11 58 09 89
Online information:	https://droneport.eu/onbemande-luchtvaart/vluchtgebieden/ebr-62/
Online Platform	https://skyman.lu/ebst/

Geozone part of EBR-62			
Reference coordinate	1. 50°47'45"N 005°12'14"E	Zone height	2000ft AMSL or 1750ft AGL
	2. 50°47'22"N 005°11'16"E		
	3. 50°47'43"N 005°11'13"E	UA Max height allowed	1650 ft AGL
	4. 50°48'00"N 005°11'25"E		
	5. 50°48'03"N 005°11'54"E		
ARC	ARC-a as defined by the Geozone Manual	GRC	VLOS/BVLOS over controlled ground area. Max. 4 as defined by the Geozone Manual
Ground buffer	50 m	Air buffer	100 ft
Sensitive areas	Public road west of geozone, forest inside fence		
Possible Time of Activity	By NOTAM 24h in advance		

UAS REQUIREMENTS	Open	Specific	Certified
UAS Class	C0-C4	C5-C6	N/A
OR			
Mass	<150kg	Not applicable	According certification
Return to home Or system to prevent UA from leaving area	X	X	According certification
Geofence set to remain within reserved zone Or system to prevent UA from leaving area	X	X	According certification
UA User Manual present	X	X	According certification
Remote ID	No	No	According certification

OPERATOR REQUIREMENTS				
	Open	Specific		
	A1/A2/A3	STS	PDRA	SORA
Airspace	To be reserved through online platform	To be reserved through online platform	To be reserved through online platform	To be reserved through online platform
UA	Demonstrate compliance* by submitting relevant data in airspace reservation tool	Demonstrate compliance* by submitting relevant data in airspace reservation tool	Demonstrate compliance* by submitting relevant data in airspace reservation tool	Demonstrate compliance* by submitting relevant data in airspace reservation tool
Pilot	A1/A3 or A2;	Compliance with STS	Compliance with PDRA demonstrated	Compliance with SORA demonstrated
OPERATIONAL AUTHORISATION	Aware of operational limitations	DECLARATION ONLY (with receipt)	PDRA requires an operational authorisation from the Belgian Civil Aviation Authority	SORA requires an operational authorisation from the Belgian Civil Aviation Authority


*= see UAS Requirements

Operational Requirements for the operator			
		Max. fire state level	G Y O R
Take-Off Pos	Within blue area (see figure 2) or RWY	Take-Off Direction	Away from buildings
Landing	Within blue area (see figure 2) or RWY	Landing direction	Away from buildings
Hover	N/A	Two-Way Communication	Required Private Mobile Radio with EBST TWR
Flight conditions	(E)VLOS & BVLOS	Means of fire extinguishing	For UAS fires and additional means for ground fires.
Mandatory Safety equipment provided by operator	First-aid kit - Fire Extinguisher High visibility jacket worn by crew		

Important Telephone Numbers			
Sint-Truiden TWR	+32(0)11 58 09 89	Fire	112 or +32 (0) 67 41 18 30
Sint-Truiden TWR	+32 (0) 473 97 61 99	Police	101 or +32 (0) 67 88 92 11

Emergency Procedures	
Loss of communication (TWR)	Land immediately and contact EBST TWR
Loss of navigation	Initiate Return-to-Home and contact EBST TWR
Fly away	Monitor direction, height and speed. Contact EBST TWR
Fire	Contact EBST TWR to inform Fire Department
Public Encroachment	Observer to secure area. Land if necessary.
Aircraft intruder	Decreasing maximum height to below obstacle height 45m AGL.

EBR 62

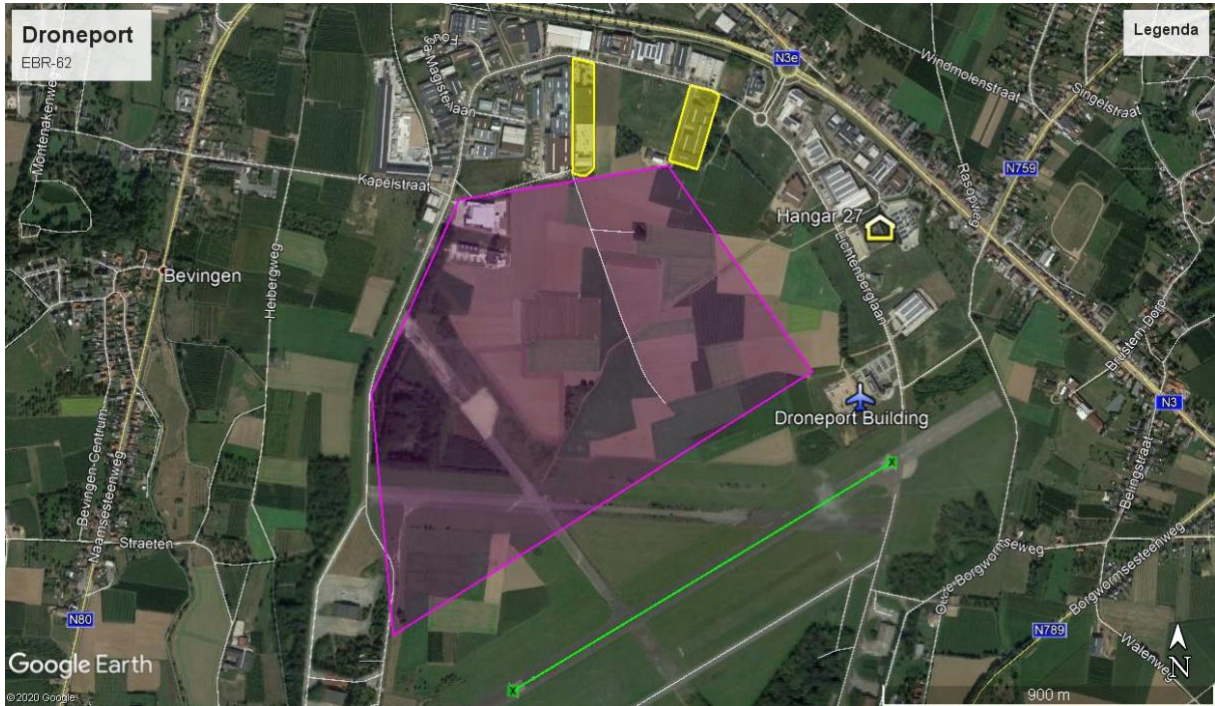

Detail

